

# Rollixo RTS control panel

No.	Description					
1	Up button					
2	Stop button					
3	Down button					
4	Prog button					
5	Prog LED					
6	Motor & safety brake LED					
7	Safety edge LED					
8	Battery LED					
9	Photocell LED					

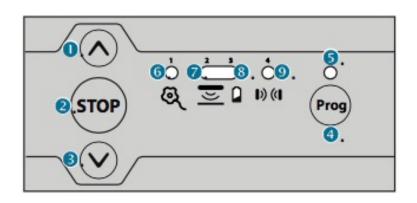


# **Mounting the Rollixo RTS**

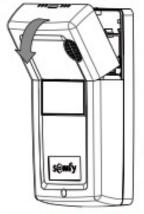


Remove the courtesy light cover.



Unscrew and remove the panel cover.

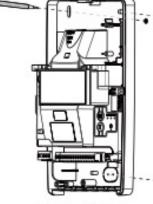


Mark the wall drilling positions.

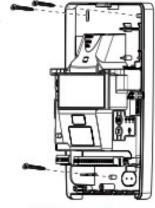

• Secure the Rollixo RTS in place.

# Somfy motor wiring

DO NOT FOLLOW THESE INSTRUCTIONS UNLESS YOU HAVE A SOMFY MOTOR

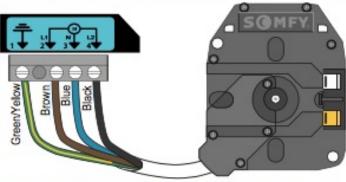


• Connect the motor wires into terminals 1, 2, 3 & 4 as illustrated above.

Note: The motor direction can be reversed during the commissioning procedure.




Secure the motor supply cable in place with the cable clamp.

# Powering up the Rollixo RTS

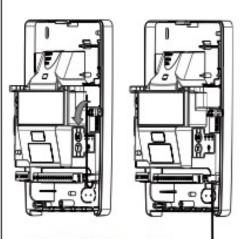

• Unfold the aerial so that it points vertically downwards.

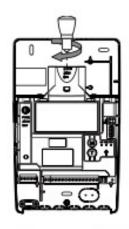

Screw the bulb supplied into the light fitting.



Refit the panel cover and secure with the screw.




Refit the courtesy light cover.

All the LED's


and then go

out.

come on briefly

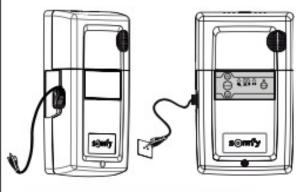

Plug in the supply cable and connect the the mains supply.



If the motor LED comes on, check the safety brake or link connection.


If the safety edge LED comes on, the safety edge transmitter has not been recognised. (This is normal if the safety edge transmitter


has not been paired to the Rollixo RTS yet).

#### Pairing the safety edge transmitter

• Bring the door and the bottom rail to a workable eye level. Press and hold the 'Prog' button on the Rollixo panel until the LED light above it comes on – Then let go!




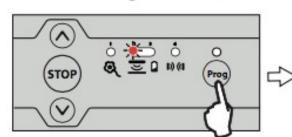

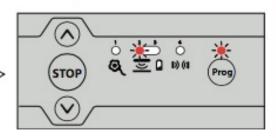

Now approach the Transmitter on the Bottom Rail – Using a small tool press the 'Prog' button on the unit until the Rollixo panel 'Prog' LED flashes, then let go (this could be up to 5 seconds) the 2 units are now active.




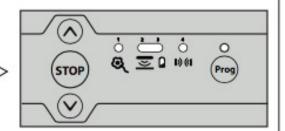


- Check the operation of the door by pressing the Rollixo Up & Down control buttons.
- Check that the safety edge works by activating the edge.

#### Pairing Keygo RTS keyfob's


 Press the 'Prog' button on the Rollixo RTS front panel until the LED above the Prog button lights up RED.

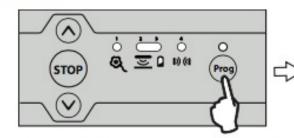


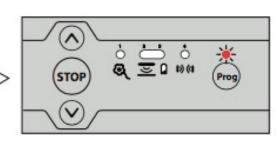

Press the button on the Keygo RTS keyfob that you want to control the Rollixo RTS controller with until the 'Prog' LED on the Rollixo RTS controller flashes and then goes out.



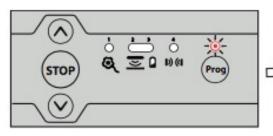

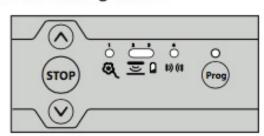

### **Positioning of Magnets**

• Bring the door down to its final closed/end limit position. If the door lands on floor and stops, go to point


If the door comes to floor and retracts (bounces back) then see check the detail below, this happens because the doors safety edge system has been activated;

- Q. Are the end blocks sat in a final position that is lower than the floor level?
- A. Raise the blocks and build up with packing.
- Q. Is there a high point or bump in the floor?
- Floor needs to be levelled.
- ② Once you are happy that the door has been installed within its operating parameters then we can fit the bottom magnet.

Mark the guide rail at its lowest point to match the arrow indicated on the right of the Transmitter. Now move the door up out of the way and use the temporary sticky pad to locate the magnet, now permanently and mechanically fix the magnet with screws provided in place. The magnet arrows should now be aligned and no more than 10mm apart.

#### **Locking out the Panel**

• Press buttons on the receiver until all the indicator lights flash.

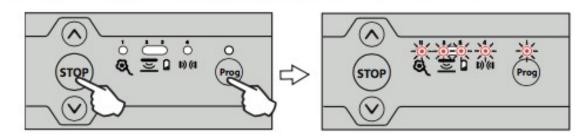

Entry into programming mode by pressing button en on the receiver is locked.


Entry into motor end limit setting mode via pressing buttons and on the receiver is locked.

The parameter setting of the operating modes is locked.

# Somfy Trouble Shooting Guide

The indicator lights on the front of the Rollixo receiver notify the user of the installation's status.

Indica	tor light status	Meaning		
0	Off	Functional installation		
辯	Rapid flashing	Deactivation/activation in progress		
*	Permanently lit	Installation fault/failure		

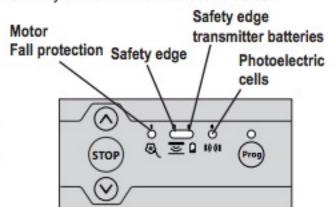

	Indicator light status							Actions/
	Q	<u>=</u>		D) (d	Prog	Diagnostics	Consequences	Troubleshooting
Motor	*	0	0	0	0	Activated motor thermal protection	No movement possible	Wait around 10 minutes
Radio safety edge	0	*	0	0	*	Radio interference on the safety edge transmitter	Opening and stopping ok Closed by pressing and holding down	If a powerful radio system is present on the site (infrared detector, TV transmitter, etc.) and is transmitting on the same frequency, the receiver will wait for the transmission to end to before controlling the door again.
	0	*	*	0	0	Safety edge transmitter low battery indication.	Opening ok Closed by pressing and holding down	If the fault persists, replace the safety edge transmitter batteries.
	0	聯	0	0	0	Obstacle detection	Remove the obstacle by automatic partial opening	Check that no obstacle is causing the safety edge to detect.
Photoelectric cells	0	0	0	*	0	Cell fault	Opening ok Closed by pressing and holding down	Check that no obstacle is cutting across the cell beam.
	0	0	0	辯	0	Obstacle detection	Remove the obstacle by full automatic opening	Check that no obstacle is cutting across the cell beam